



## RE-SETTING BAIL UNIT CONTROLLER(BUC)

**If your Automilker system is having problems such as when you switch on the BUC to start the plant up, and the “RUN & AIR lights don’t come on.**

**This fault can be caused by bad power upsetting the micro controller in the BUC**

**What you need to do is re-set your BUC as follows:**

1. Switch the power to the BUC off at the Power source.
2. Leave Power off for at least 30 seconds, this gives the capacitors time to discharge (check “power” LED is off).

3. Switch power back on, the power LED on front panel should come on

4. Switch the run switch on the side of the BUC to OFF then ON again. “Run” & “Air” LED’s should come on indicating Automilkers are ready for milking.

